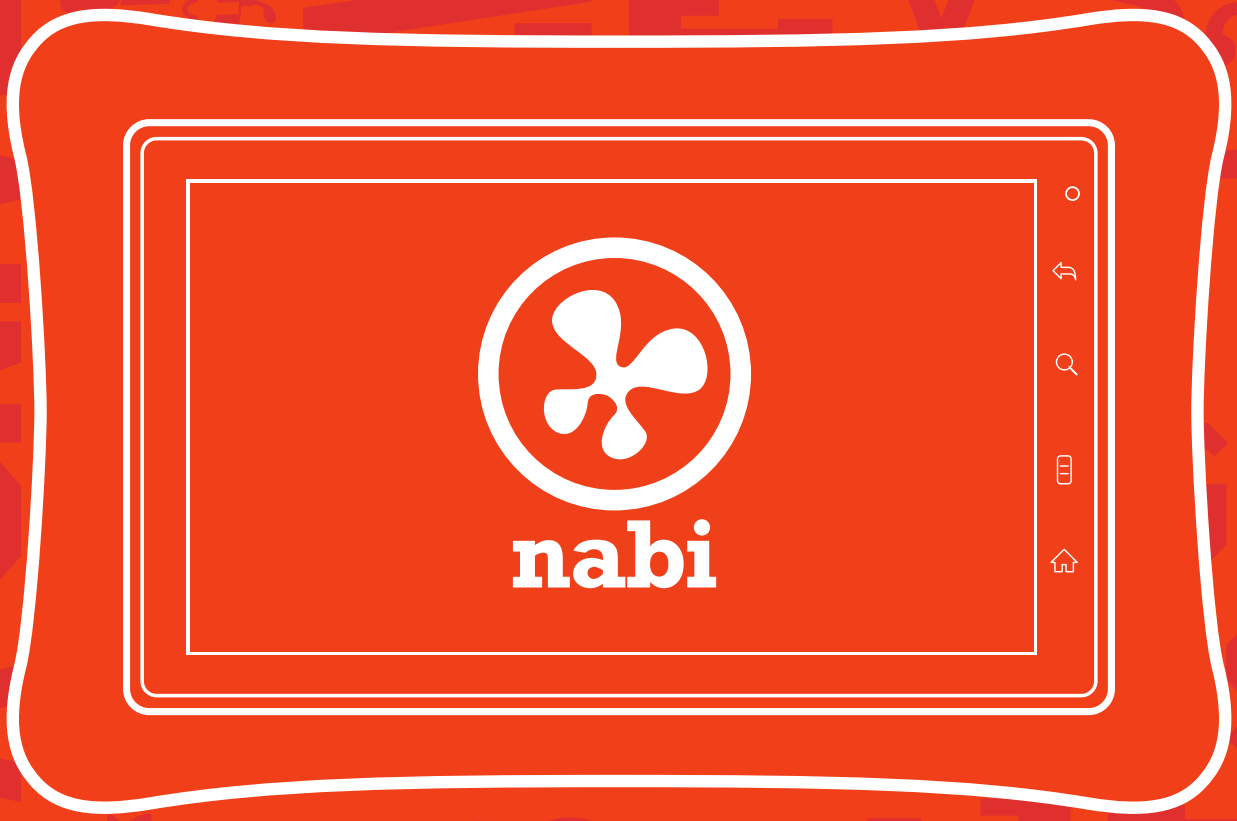

User Manual

Updated: 02/03/2012

Contents

01 **At a Glance** 4
- **1.1** Overview 4
- **1.2** Home Screen 6
- **1.3** Buttons 8
- **1.4** Touch and Navigation 9
- **1.5** Status Icons 10

02 **Getting Started** 12
- **2.1** Charging nabi 12
- **2.2** nabi™ Welcome Screen 12
- **2.3** nabi™ Account Setup 13
- **2.4** Connecting to WiFi 13

03 **nabi™ Basic** 14
- **3.1** Kidz Mode 14
- **3.2** Mommy Mode 15
- **3.3** Switching Between Modes 15
- **3.4** Using Apps 16
- **3.5** Using the Camera 21
- **3.6** Using the On Screen Keyboard 21
- **3.7** Settings 22
- **3.8** Child Settings 24
- **3.9** Account Settings 24

04 **Troubleshooting** 25
- **4.1** Battery/ Charging 25
- **4.2** WiFi 25
- **4.3** Display 26
- **4.4** Speaker/ Microphone 26
- **4.5** nabi™ Account Management 27
- **4.6** Resetting nabi 27

05 **Tips & Tricks** 28
- **5.1** Extending Battery Life 28
- **5.2** Improving Performance 28
- **5.3** Expanding Memory 28
- **5.4** Transferring Files 29

06 Important Safety and Handling Information 30

07 Fuhu One (1) Year Limited Warranty 34

01 At a Glance

This section provides information on the nabi™ controls, buttons, status icons and more.

1.1 Overview

Front View:

1. **Power Indicator:** display power/charging status.
2. **Light Sensor:** control screen brightness automatically.
3. **Camera:** take photos and record videos.
4. **Back Key** : tap to return to the previous screen.
5. **Search Key** : launch a Google Search (Mommy Mode only).
6. **Menu Key** : tap to display the menu for the current screen.
7. **Home Key** : tap to return to the home screen, or tap and hold to view recent applications (Mommy Mode only).
8. **Microphone:** used for speech and recording audio.

Back View:

1. **Speaker:** plays audio from songs and other media.
2. **Reset Button:** used to perform soft resets.

Angle Views:

1. **Volume Buttons:** press to adjust the audio volume of songs and other media, alerts and sound effects.
2. **Power/Lock Button:** press to power on/off, and lock/unlock the device.
3. **3.5mm Headset Jack:** connects the audio to headphones or external speakers.
4. **Mini USB Port:** plug to transfer files to/from a computer with a USB cable.
5. **Mini HDMI Port:** plug to view photos or videos on an HDTV with an HDMI cable.
6. **Power Charger Port:** insert power adapter plug to provide power and charge the battery.
7. **MicroSD Card Slot:** insert MicroSD card to expand memory or access external content.

Accessories:

Your nabi comes with the following accessories:

1. **Power Adapter:** the Power Adapter included with your nabi is used to provide power to the device and charge the battery.
2. **USB Cable:** the USB cable allows you to transfer files between your nabi and computer (Mommy Mode only).
3. **Red Bumper:** nabi comes with a soft touch protective rubber case that helps absorb potential shocks.

1.2 Home Screen

The home screen is the first screen you see when you power on your nabi, or tap the **Home Key** .

Kidz Mode and Mommy Mode have different home screens and different options for management and customization. For more information on Kidz Mode and Mommy Mode, please visit **Sections 3.1 – 3.2**.

Kidz Mode Home Screen:

1. **Status Bar:** displays icons that show battery power, battery status, time and WiFi details. For more information on status icons, please visit **Section 1.5**.
2. **Applications View:** displays a tile view with all available applications.
3. **Screen Panel Indicator:** Kidz Mode comes with 7 screen panels, this indicator displays the position within the 7 panels.

Mommy Mode Home Screen:

1. **Status Bar:** displays icons that show battery power, battery status, time, WiFi details and notifications. For more information on status icons, please visit **Section 1.5**.
2. **Widgets:** applications that run on the home screen.
3. **Shortcut:** icons that open your favorite or frequently used applications, web bookmarks and more.
4. **Applications View:** displays a tile view with all available applications.
5. **Screen Panels Indicator:** Mommy Mode comes with 5 screen panels, this indicator displays the position within the 5 panels.

Orientation:

Your nabi can be viewed in either portrait or landscape orientation. For most screens, you can automatically change the screen orientation by rotating your nabi. Some applications and screens are limited to a specific orientation. Please note that in Kidz Mode most applications are only available in landscape orientation.

You can also disable auto-rotation for Mommy Mode: from any home screen, tap **Menu Key** **> Settings > Display > Auto-rotate screen** and deselect this option.

1.3 Buttons

Power/Lock Button:

The **Power/Lock Button** allows you to power on and off, as well as lock and unlock your nabi.

Action	Description
Turn on nabi	Press and hold the **Power/Lock Button** down for 8 seconds when the tablet is off.
Turn off nabi	Press and hold the **Power/Lock Button** down for 8 seconds, and tap Power Off.
Lock nabi	When the device is on, short press the **Power Button**.
Unlock nabi	When the device is locked, short press the **Power Button** and unlock the screen by holding the green **Unlock Icon** and swiping it across the screen.

Please note that by default the screen on your nabi will automatically shut off after 10 minutes. To turn the screen back on, simply press the Power/Lock Button, then unlock the screen. To change the screen timeout settings, from any home screen:

- In Mommy Mode, tap **Menu Key** > **Settings** > **Display** > **Screen timeout**.
- In Kidz Mode, tap **Menu Key** > **Device Settings** > **Display** > **Screen timeout**.

Volume Buttons:

The **Volume Buttons** allow you to adjust the audio volume of alerts, sound effects, songs and other media.

Action	Description
Increase the volume	Press the **Volume + Button**.
Decrease the volume	Press the **Volume – Button**.

You can access more sound options, from any home screen:

- In Mommy Mode, tap **Menu Key** > **Settings** > **Sound**.
- In Kidz Mode, tap **Menu Key** > **Device Settings** > **Sound**.

For more information on sound options, please visit **Section 3.7**.

1.4 Touch and Navigation

Tap:

Touch the screen once to open items.

Tap and hold:

Tap and hold down on the icon you want to move.

Drag:

Press and hold on the icon, then drag it to the open spot where you would like to move the application.

Swipe:

Quickly move your finger up and down (or left and right) the screen in the direction that you want to scroll.

Zoom (In and Out):

Using two fingers, pinch the screen to zoom in or zoom out when viewing photos or a web page.

1.5 Status Icons

The status bar at the top of the screen displays icons that provide information about your nabi such as battery status, WiFi status, time and more.

Battery	
	Battery is full
	Battery is partially drained
	Battery is low
	Battery is charging

WiFi	
	Connected to a wireless network
	Network is available

Bluetooth	
	Bluetooth is on
	Connected to a Bluetooth device

Sound	
	Silent mode
	Vibrate mode
	Alarm clock is on
	Song is playing

02 Getting Started

This section provides information on how to setup your nabi when you power on for the first time.

2.1 Charging nabi

The nabi is powered by a rechargeable, Lithium-Polymer battery. To begin using nabi, you must first charge the device by connecting the power adapter to the tablet and a working outlet.

To prolong battery life, fully charge the battery for up to four hours when using your nabi for the first time and whenever the battery power is depleted.

⚠ **Caution:** Use only the power adapter that came with your nabi to charge the device. Using a different power adapter may damage your nabi.

Note: The battery should only be replaced by a Fuhu Authorized Service Provider. Any attempt to remove or replace your battery may damage your nabi.

2.2 nabi™ Welcome Screen

The first time you power on your nabi, you will be greeted by the nabi™ welcome screen. It will guide you through 2 easy steps to setup your WiFi and your nabi™ account.

Please note that WiFi is not required for the initial setup but it is highly recommended.

2.3 nabi™ Account Setup

nabi requires you to create an account when you power nabi on for the first time. With a nabi™ account you will be able to control the apps and games available for your child to use, register for nabi™ cares online support, and shop for apps and games with a 1-tap buy.

You may already have a nabi™ account created if you are a Fooz Kids user or you own more than one nabi. If this is the case, you will be required to Sign In instead of Signing Up. To Sign In, simply click on the **Sign In** link during the nabi™ setup process.

2.4 Connecting to WiFi

If you did not connect to a WiFi network when you first started your tablet, or if you want to connect to a new network, from any home screen:

- In Mommy Mode, tap the **Menu Key** > **Settings > Wireless & Networks > WiFi settings**.
- In Kidz Mode, tap the **Menu Key** > **Device Settings > Wireless & Networks > WiFi settings**.

If WiFi is not on, tap WiFi to turn wireless on, and wait for your tablet to detect nearby networks. Tap the name of your network and enter a security password, if it is required by the WiFi service that you are using.

03 nabi™ Basic

This section provides information on the different nabi™ modes, using apps, device settings and more.

3.1 Kidz Mode

After going through the nabi™ welcome screen and setup, you'll be taken directly to Kidz Mode.

Kidz Mode is a kid-safe environment that children cannot exit without a parental password. It offers exclusive applications developed for children's education and fun. Kidz Mode includes pre-installed applications such as Fooz Kids (Web, Crafts, Games, Videos, University, Flix and Books), MeeGenius and much more.

Kidz Mode allows kids to search for kid-friendly apps in the nabi™ Store. In order to download any apps or access device settings, a parental password is required.

You can also control which apps your child can access in Kidz Mode. To manage these apps: from any home screen, tap **Menu Key** > **Mommy Mode** > **Applications View** > **Add Apps** and select the apps and games you want to make available for your child. For more information on using apps, please visit **Section 3.4**.

3.2 Mommy Mode

Mommy Mode is where parents can enjoy the Android environment. nabi features an Android browser, its own application store, as well as all the utilities commonly found in the Android environment.

Mommy Mode allows you to access the App Zone to download a larger selection of apps – more than just apps for kids, as well as manage what your child can see in Kidz Mode.

For more information on how to manage apps for Kidz Mode in Mommy Mode, please visit **Section 3.1**.

3.3 Switching Between Mommy Mode and Kidz Mode

To switch from Kidz Mode to Mommy Mode a password is required. To enter the parental password: from any home screen, tap **Menu Key** > **Mommy Mode > Enter password > Submit**.

To switch from Mommy Mode to Kidz Mode: from any home screen, simply tap **Applications View** > **Kidz Mode**. Please note that Mommy Mode comes with a Kidz Mode shortcut preloaded on the main home screen.